



INSTALLATION INSTRUCTIONS

APFSLR2 Reversible Shower Seat Installation



Customer Support: 1.877.947.7769
Email: apsupport@accessibilitypro.com



APFSLR2 Shower Seat Installation Instructions

IMPORTANT: PROPER BACKING MATERIAL AND MOUNTING HARDWARE MUST BE USED TO MOUNT THIS SHOWER SEAT FOR SAFE USE AND AS REQUIRED BY A.D.A. GUIDELINES. ADA REGULATIONS SPECIFY A FINISHED SEAT HEIGHT 17" TO 19" ABOVE THE FINISHED FLOOR AND 1½" OF CLEARANCE BETWEEN THE SEAT EDGE AND THE SIDE WALL.


PLEASE READ THESE INSTALLATION INSTRUCTIONS THOROUGHLY PRIOR TO INSTALLING THE SEAT TO IDENTIFY THE TOOLS RECOMMENDED FOR INSTALLATION, AS WELL AS THE MOUNTING HARDWARE REQUIRED TO COMPLETE THE INSTALLATION. IMPORTANT: THIS PRODUCT SHOULD ONLY BE INSTALLED BY QUALIFIED AND TRAINED PERSONNEL

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD LEAD TO IMPROPER INSTALLATION OF THE TUB SEAT AND/OR SERIOUS BODILY INJURY IN USE. IN ADDITION, ALL WARRANTIES, EXPRESS OR IMPLIED, WILL BE NULL & VOID DUE TO IMPROPER INSTALLATION OF THIS PRODUCT. SEACHROME CORPORATION DOES NOT ASSUME ANY LIABILITY FOR DAMAGE RESULTING FROM SERVICES PERFORMED BY OTHERS, OR FAULTY INSTALLATION, MISUSE OR MISAPPLICATION OF GOODS.

THIS PRODUCT IS DESIGNED TO MEET OR EXCEED ALL LOAD REQUIREMENTS ESTABLISHED IN THE FEDERAL SPECIFICATION #WW-P-541/8b AT 250 POUNDS OF FORCE.

THE PERFORMANCE OF THIS PRODUCT IS SIGNIFICANTLY IMPACTED BY THE STRENGTH OF THE WALL TO WHICH IT IS ATTACHED. TO ASSURE PROPER AND SAFE INSTALLATION, THIS SHOWER SEAT MUST BE INSTALLED INTO A MINIMUM 2" THICK, SOLID WOOD, IN-WALL BACKING MATERIAL. MAKE CERTAIN IN-WALL BACKING COMPLIES WITH ALL LOCAL BUILDING CODE REQUIREMENTS.


1. Determine desired shower seat location and seat configuration.

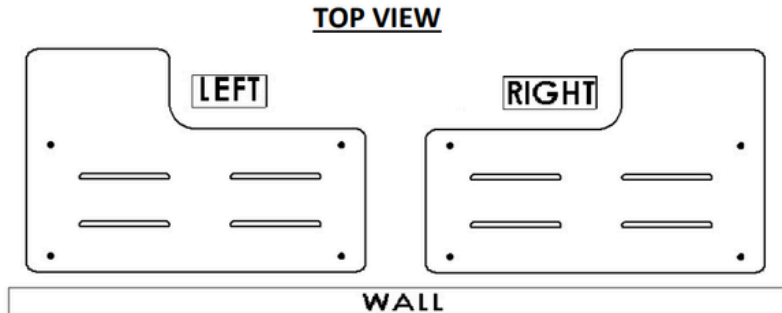

SEAT CONFIGURATION

Determine desired location for the shower seat and corresponding seat configuration; left or right.

2. Mounting the seat top to the frame.

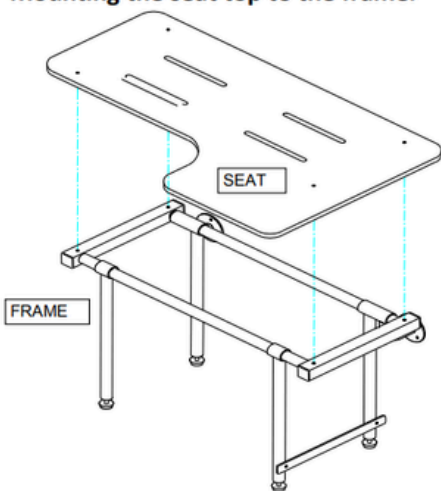


Mount the seat top to the frame in the desired configuration.


Using four (4) ¼"-20 x 2" Phillips Flat Head machine screws and (4) ¼"-20 Nylon Lock Nuts (supplied by manufacturer), secure the seat top to the frame. Torque screws to 20 ft-lbs.

3. Determine seat height from the floor and location relative to the inside back wall.

ADA regulations specify a finished seat height 17" to 19" above the finished floor and 1-1/2" clearance between the seat edge and the inside back wall.

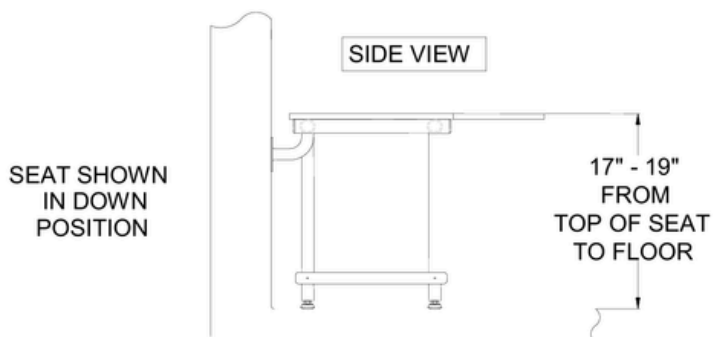

Place the seat in an upright position with the mounting flanges placed firmly against the shower wall.

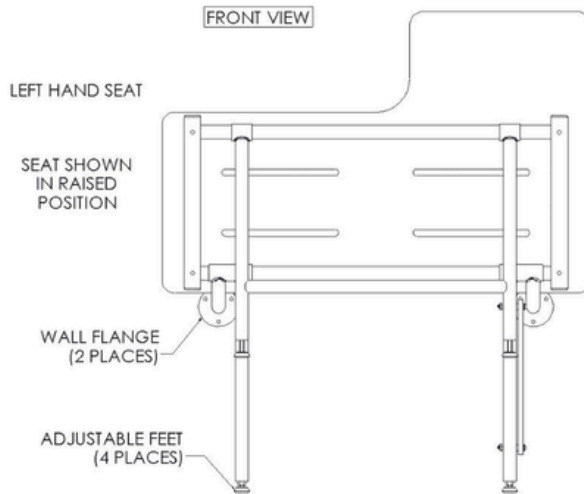

Level the seat by changing the adjustable rubber feet to the desired mounting height (17"-19"). Tighten the lock nuts.

With the mounting flanges placed flush against the wall, mark the position of the three holes in each flange. Using a 1/8" Carbide tip drill bit (not provided), create three mounting holes each for the right and left mounting flanges.

4. Mounting the seat to the wall.

Holding the seat assembly in the down position, make any necessary final adjustments to the adjustable rubber feet. With the feet resting firmly on the floor, tightly secure the two mounting flanges to the wall **AND INTO 2" THICK, SOLID WOOD IN-WALL BACKING MATERIAL**, using six (6) #12 x 2-1/2" stainless steel screws (supplied by manufacturer).

5. Check Seat for:

- | | |
|----------------------------------|--------------------------------|
| 1) Proper up and down operation. | 3) Correct distance from wall. |
| 2) Correct finished height. | 4) Weight bearing. |

Hardware provided:

- (4) 1/4"-20 X 2" Phillips Flat Head machine screws
- (4) 1/4"-20 Nylon Lock Nuts
- (6) #12 X 2-1/2" Phillips Pan Head sheet metal screws

Tools required:

Tape measure, masking tape, power drill, 1/8" Carbide tip drill bit, marking pen/pencil, level, #3 phillips driver.

THIS COMPLETES THE INSTALLATION OF THE SLR2 SHOWER SEAT.

17" to 19" Finished Mounting Height for Naugahyde Seat Top

1
2

17" to 19" Finished Mounting Height for Phenolic / HDPE Seat Top

5
32

5
8

3" Dia

1" Dia. Hole

Ø2.317


Bolt Circle

(Wingts Compatible)

Ø0.265^{+0.010}
-0.000
(3 Plcs)

120° (typ)

Shower Seat Mounting Flange Template

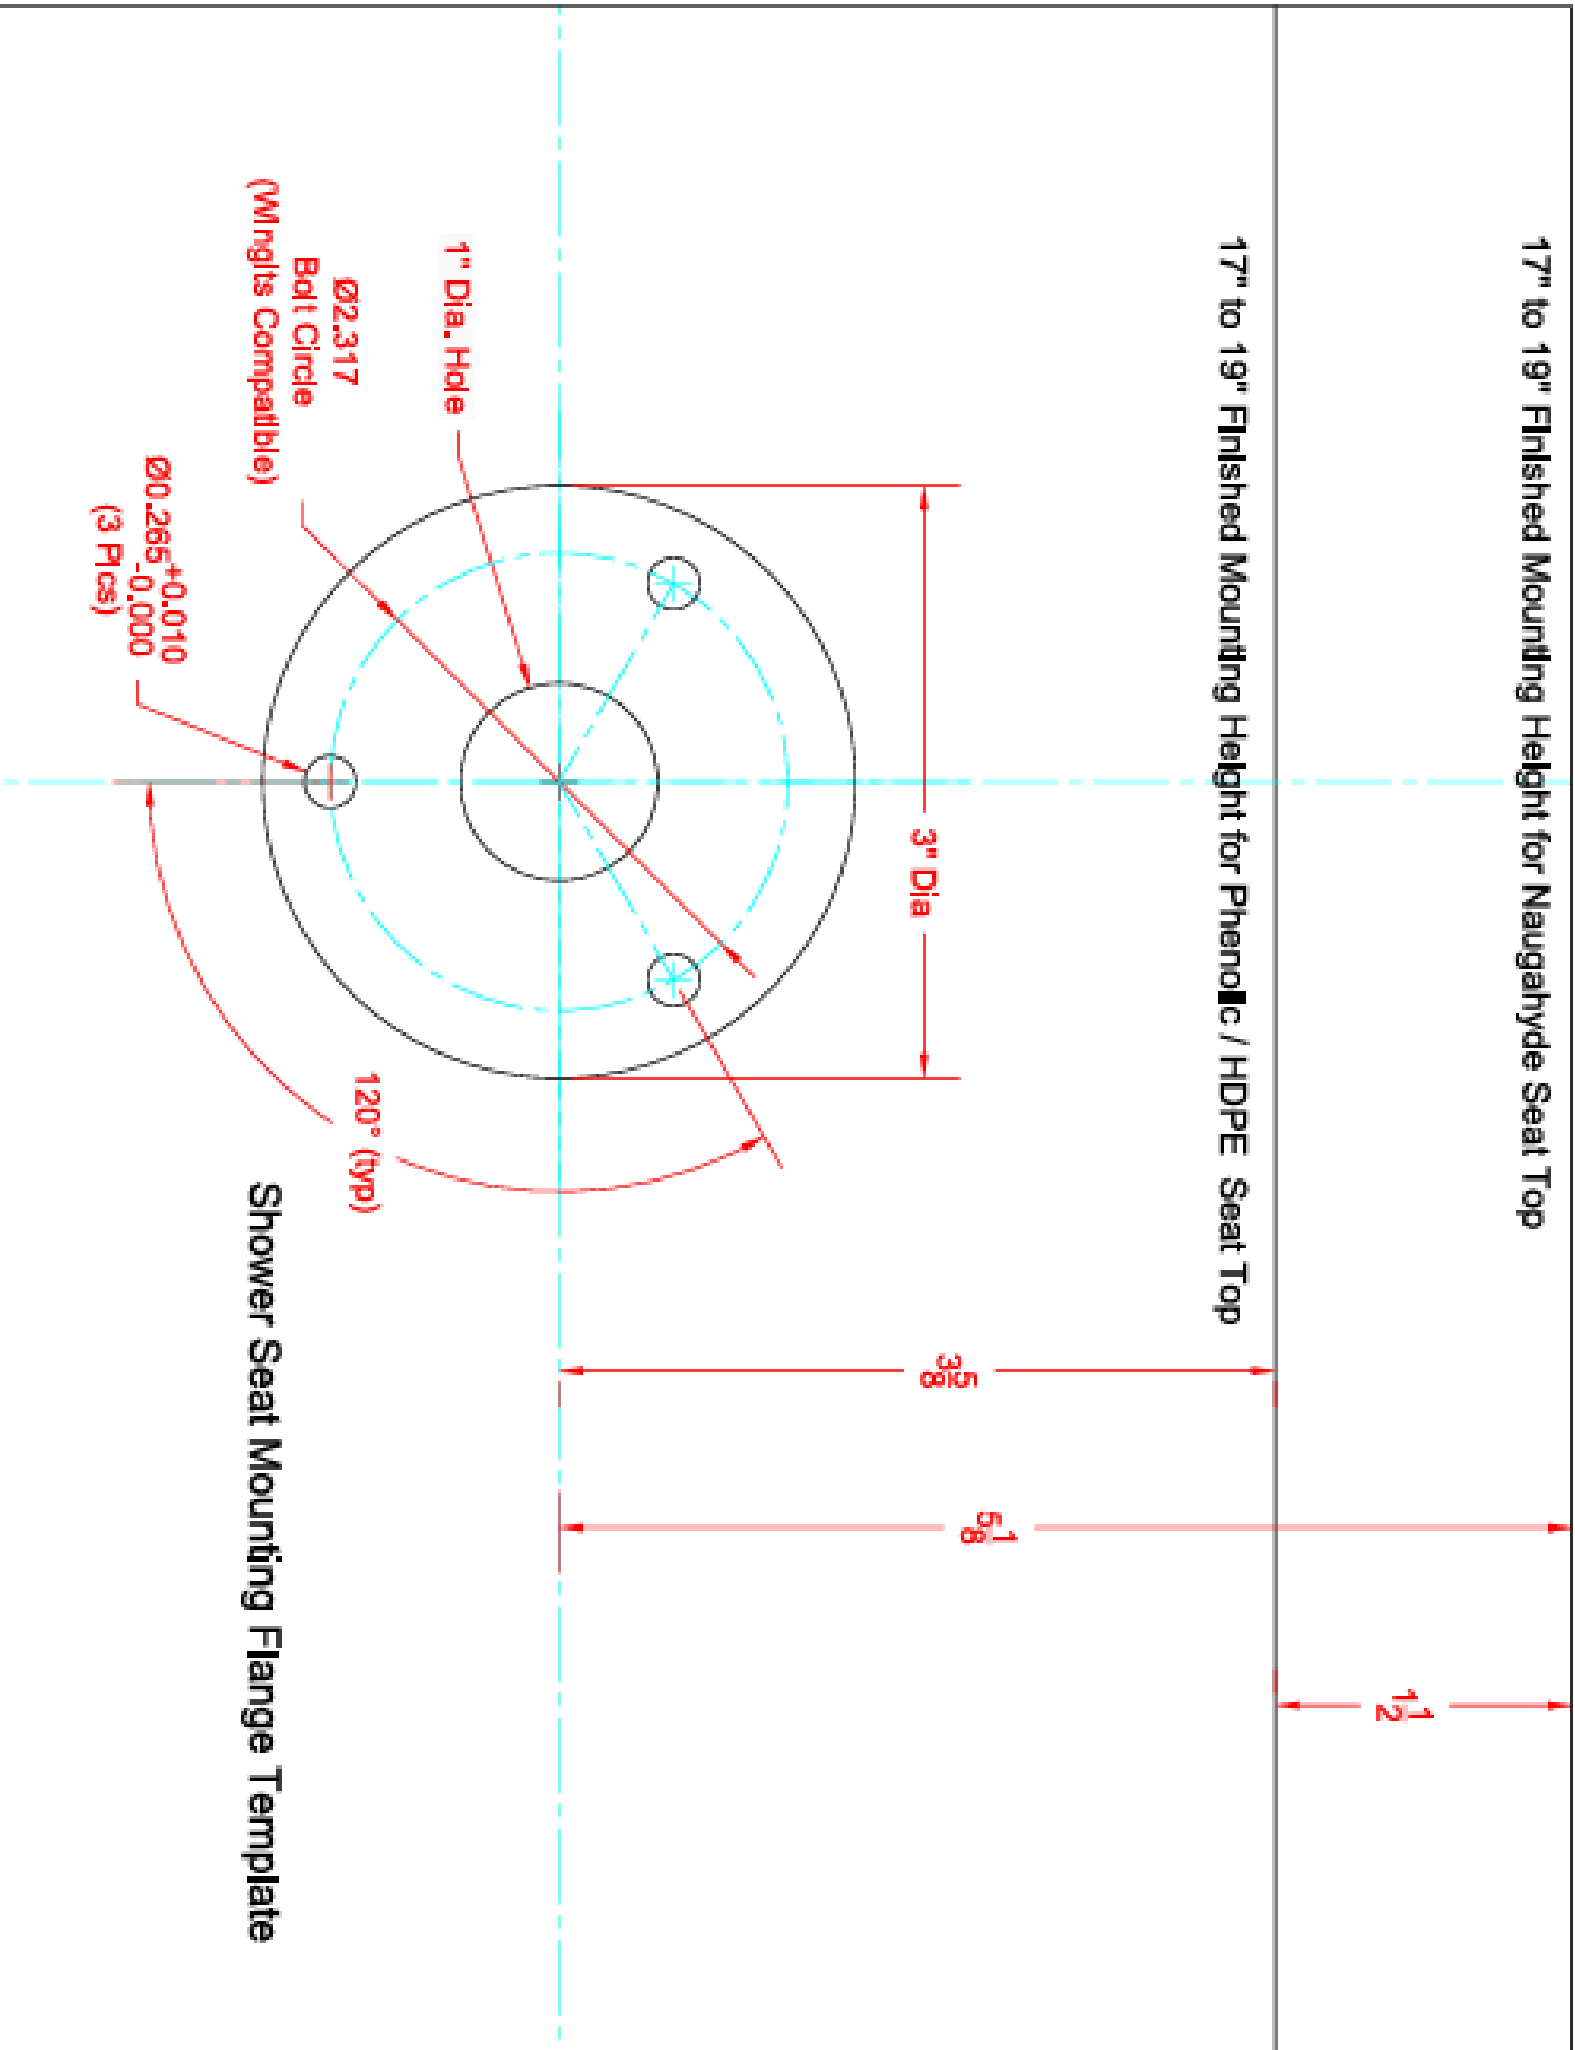


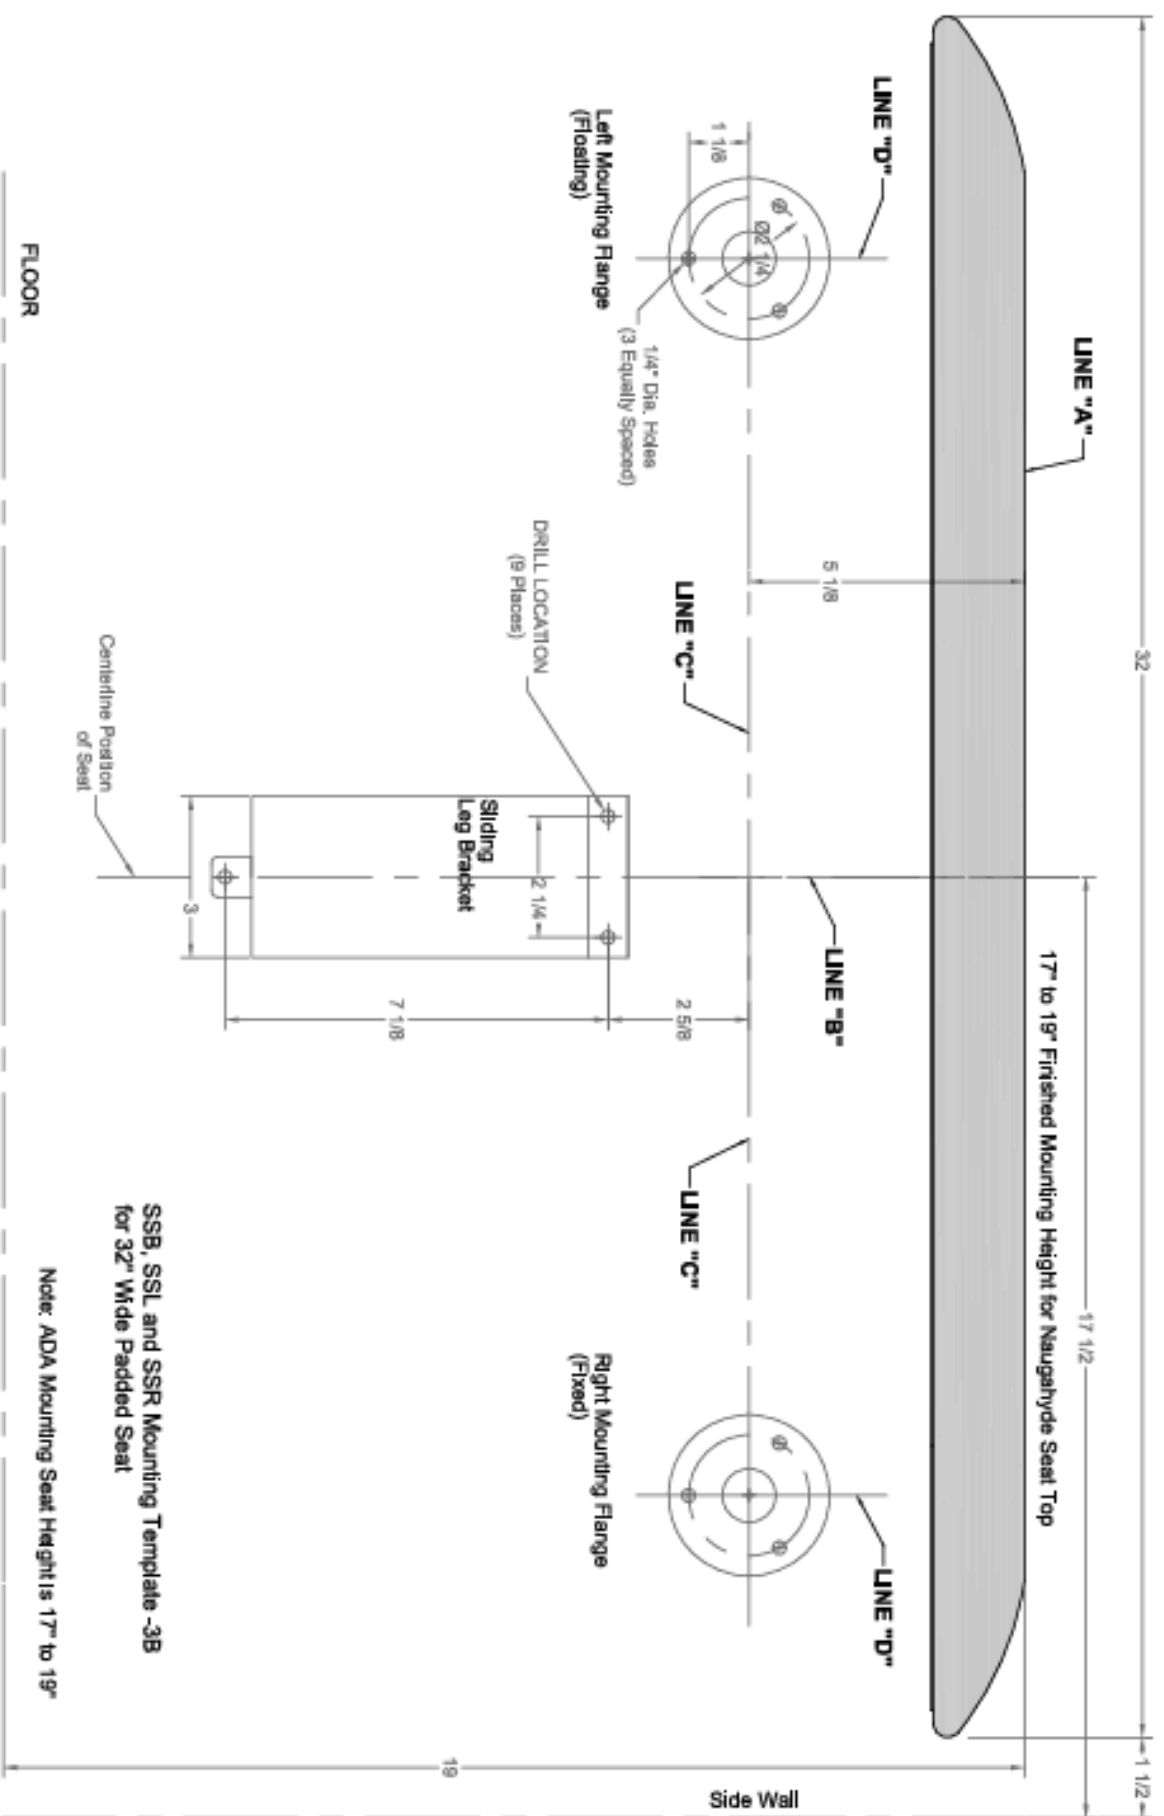


DIAGRAM #3B

Example Only:

Sample Seat Size ■ 32" Wide Naugahyde Cushion Seat Top

Installation Instructions

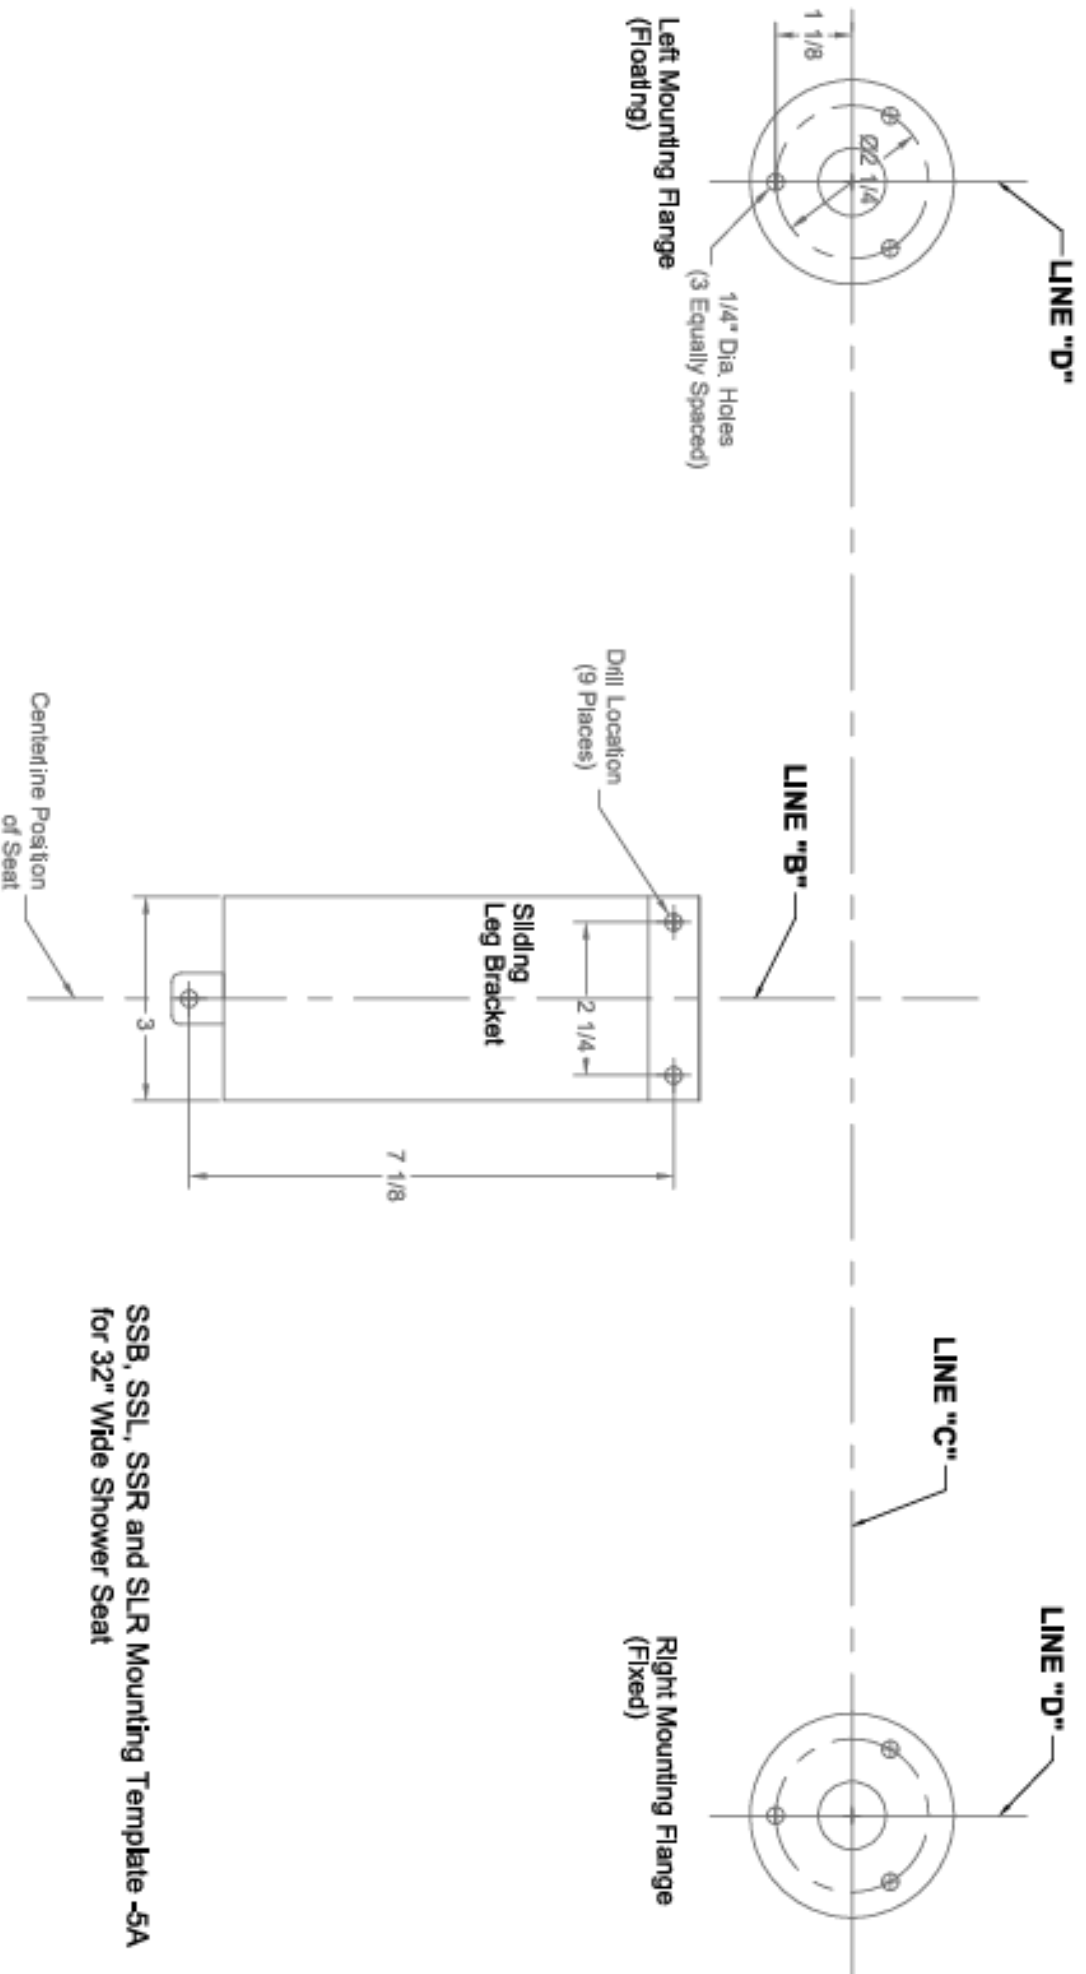

SSB, SSL, SSR and SLR Mounting Template -5A
for 32" Wide Shower Seat

DIAGRAM #5A

Installation Instructions