


Installation Instructions

Installation Instructions

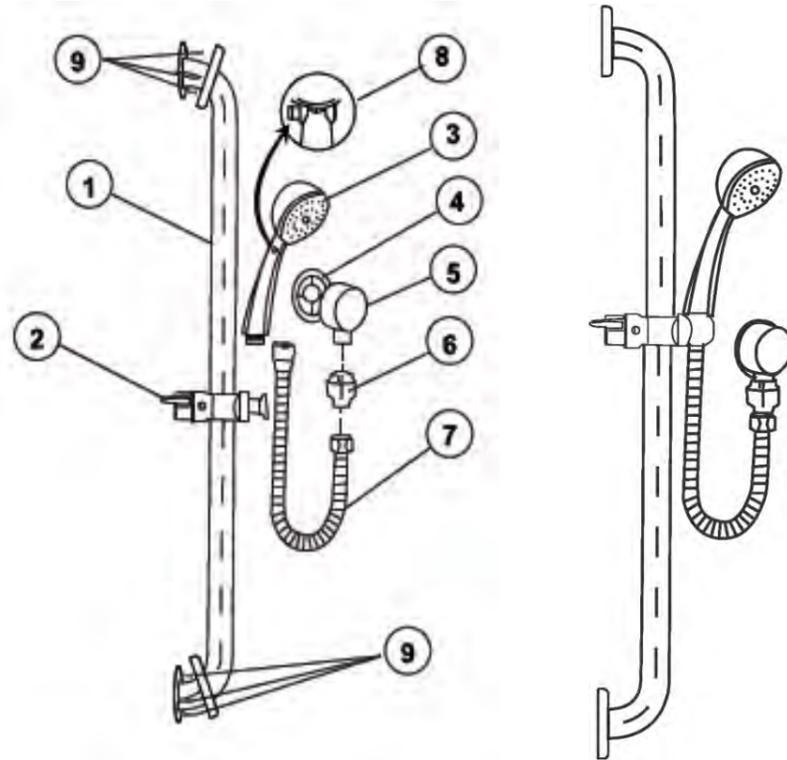


Detail part drawing


General assembly drawing

- 1.. Slide Bar
- 2. Slide Bar bracket
- 3. Hand Shower
- 4. Gasket
- 5. Elbow
- 6. Vacuum breaker
- 7. Hose
- 8. Pause(flow rate controlled per *on/off* button on body)
- 9. Screws

1) Have the Slide Bar connected to the wall by a licensed professional.

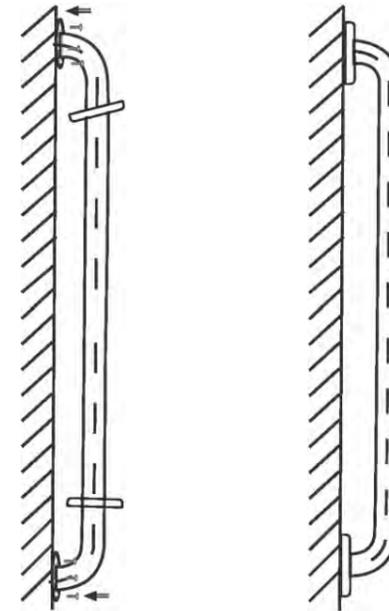


2) Connect the Slide Bar Bracket to the Slide Bar. See detailed photo instructions if needed.

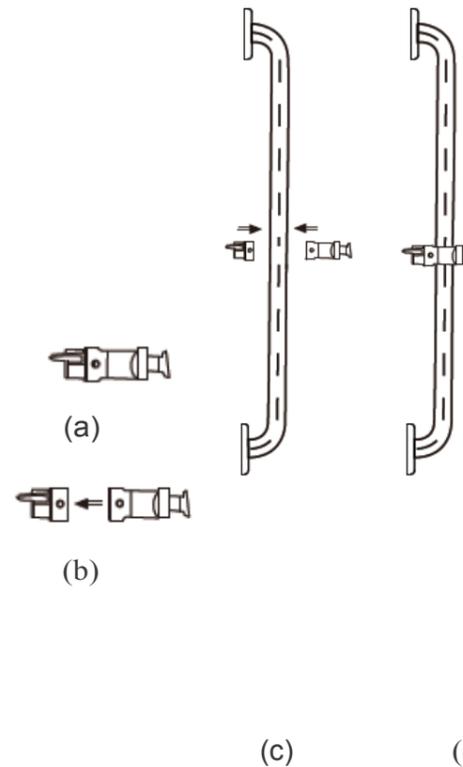


3) The connection to the water output pipe or pipe fitting should protrude 10mm-15mm from the shower wall. This connection needs to be wrapped in waterproof tape to insure a tight seal. Connect the water pipe output or pipe fitting to the elbow.



4) Connect the Elbow to the Vacuum Breaker.

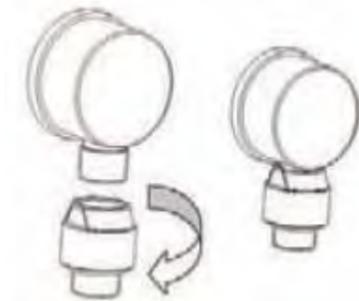

5) Connect the Hose with the Vacuum Breaker as shown in the drawing.

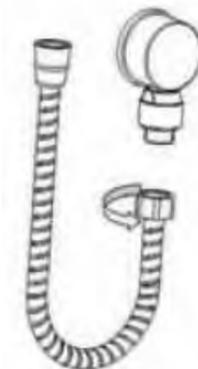

6) Connect the Hand Shower with the Hose as shown in the first page of General Assembly Drawing.

Instructions for Installing Handheld Shower on a Grab Bar or Shower Pole

Step 1


Identify the different parts of your new handheld shower.

Lever: Moves to loosen and tighten the connection with a grab bar or shower pole in order to slide the attachment up & down.

Clip: Slides over a grab bar or shower pole


Clip for holding the handheld shower

Tab Buttons & Insertion Hole: the tabs click into the insertion holes, locking the two pieces together. The two pieces are locked together in the photo shown below.

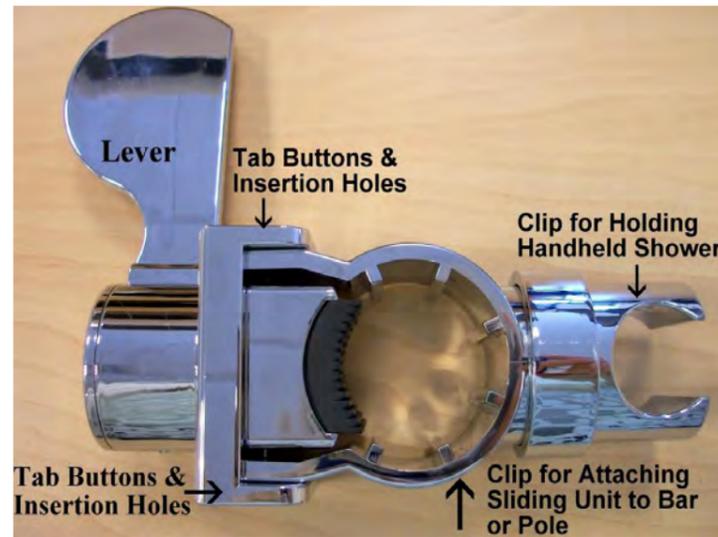

Step 2

Separate the clip piece from the lever piece by depressing both sides of the clip piece at the same time so the tab buttons will come free of the insertion holes.

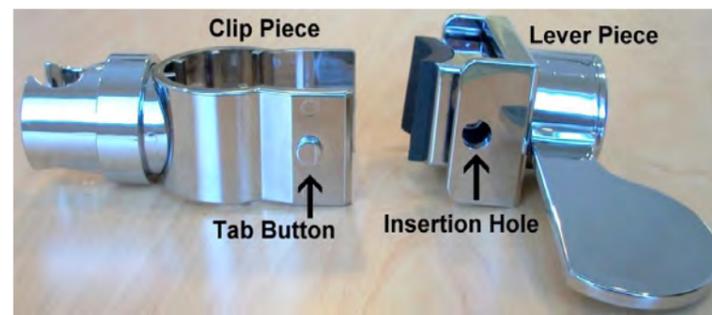


Step 3

Push the arms of the clip piece around the grab bar or shower pole




Step 4

The clip piece should fit snugly around the grab bar or shower pole.

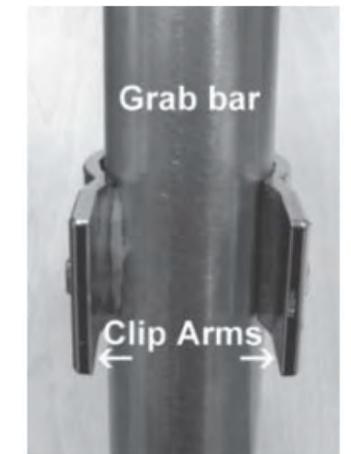

Step 5

Attach the lever piece by sliding until the tabs lock into the holes. This will lock the two pieces into place around the grab bar or shower pole.

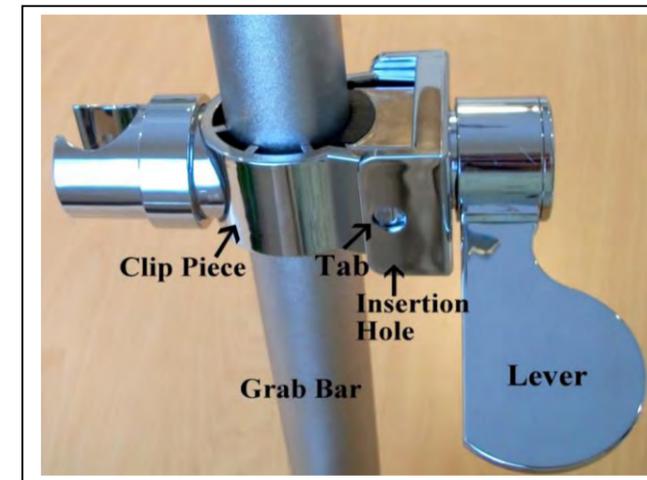

Step 6

When the lever is in the up position, the two piece assembly will slide up or down the grab bar allowing the shower to be located at the most comfortable height. Push the lever down to lock the shower into place. Enjoy!

