

APWOL2652

Acrylic Outward Swing Door Walk-In Tub Specifications

Actual Size: 26" x 52" x 40" • (66.04cm x 132.08cm x 101.6cm)

Shipping Size: 29" x 60" x 50" • (73.66cm x 152.4cm x 127cm)

Net Weight: 205lbs • (92.98kg)

Shipping Weight: 300lbs • (136.07kg)

Seat Width: 19" • (48.26cm)

Unoccupied Water Capacity: 75gal • (283.9L)

Occupied Water Capacity: 35-55gal • (132.48 - 308.19L)

Included Features (Soaking)

- 1. Acrylic shell gloss white finish fiberglass gelcoat reinforced
- 2. Stainless steel frame with adjustable leveling legs
- 3.Plastic composite and tempered glass outward swing door with 2 latch gear & shaft mechanism
- 4.Removable front apron with two access panels 5.One reversible end panel & extension panel 8" 6.Stainless steel chrome finish deck and wall-mounted grab bar 7.Two 2" 4-port PVC drains with 2 end caps included, 2

overflows, 2 stainless steel operated openers with extended handles in chrome finish

Jetting & Therapy Options

- 1.Air + Hydro (LED Chromatherapy Light Included)
- 2. Hydro + Hydro Independent Foot Massage (LED Chromatherapy Light Included) * (2)
- 3. Hydro Massage + Microbubble (LED Chromatherapy Light Included)
- 4. Hydro Massage (LED Chromatherapy Light Not Included)



Jetting & Therapy Systems

Hydro Massage

- •Hydro Massage Pump 7A
- •Intensity Dial Air Control
- •Ozone Sterilization 0.04A
- •13 jets (7 Seat Jets 6 Foot Jets)
- •On/Off Push Control
- •In-line Water Heater 6A 650W

Hydro + Hydro Foot Massage *(2)

- •2 Hydro Massage Pumps 5A + 7A
- •2 Intensity Dial Air Controls
- •Ozone Sterilization 0.04A
- •13 jets (7 Seat Jets 6 Foot Jets)
- •On/Off Push Control
- •In-Line Water Heater 6A 650W

Air Massage • Air Massage Pump

- 4.5A 500W
- •3 Speed Pump
- •Auto-purge (Activates 20 minutes after pump shutdown)
- •17 jets (11 Seat Jets 6 Foot Jets)
- On/Off push control

Optional Features

- 1.Heated Seat and Backrest
- 2.Digital Controller

Microbubble Therapy

- •1 HP Pump 7.3A
- •Pressure Vessel
- On/Off push control
- Agitator Valve

Electrical Requirements

Dedicated GFCI protected electrical line(s)required 115/120V 60Hz

Note: LED Chromatherapy light 0.5A with On/Off push control is included with the following dual packages: Hydro + Air, Hydro + Micro, Hydro + Hydro

Disclaimer*: AMP value for each pump may change based on availability.

Please verify before purchase. (1.877.947.7769)

2 Piece Faucet

- •Up to 16GPM @ 60PSI (at ideal
- in-home plumbing conditions)
- •Two 5' Water Supply Lines 3/4"
- •Pull out Hand Shower in

Chrome Finish with a 5'

Retractable Stainless Steel

Braided Hose


Warranty

•Lifetime limited* warranty on shell, frame, door, and parts to original purchaser/Address •Labor or installation is not covered






Acrylic Outward Swing Door Walk-In Tub Specifications

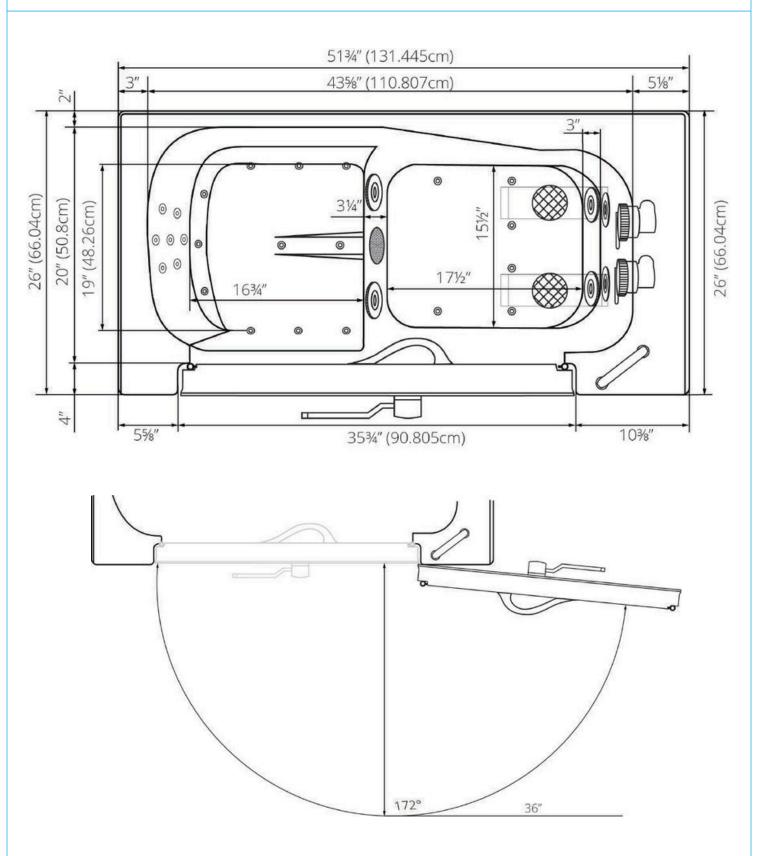






Acrylic Outward Swing Door Walk-In Tub Specifications

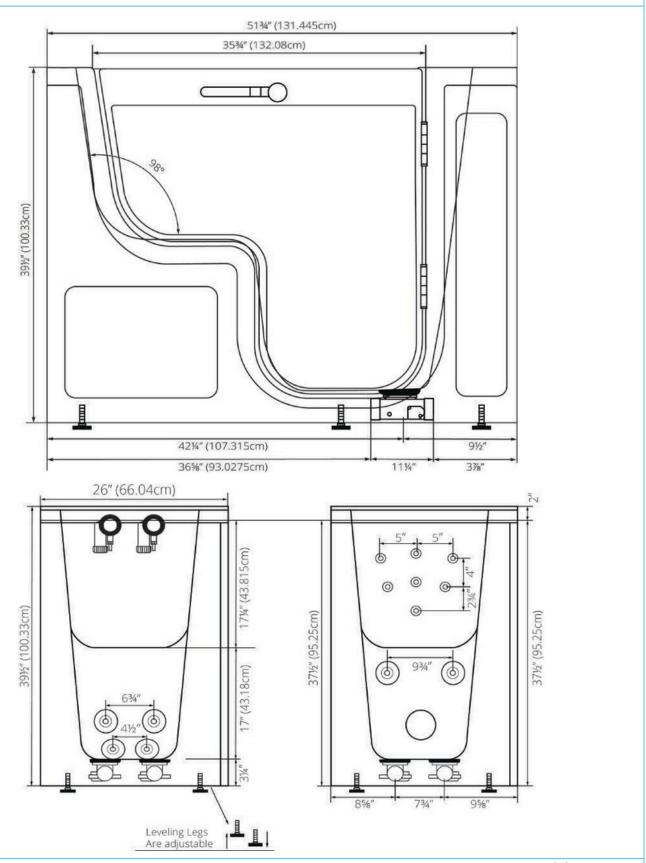



APWOL2652 2" T-type Dual Port Floor Drain

Dual Drain Technology - Two 2 Inch Independent Floor Drains

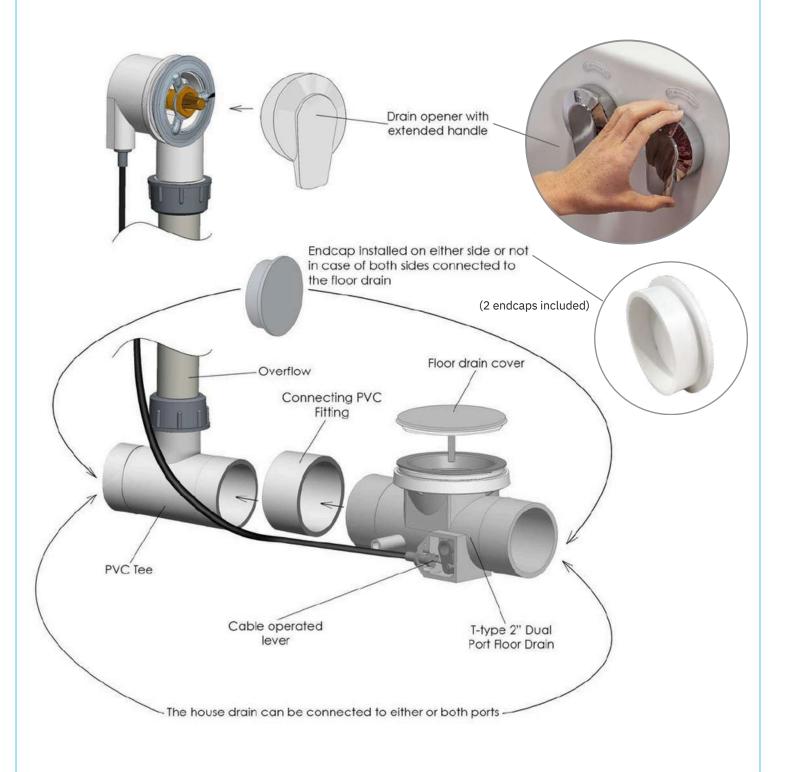



APWOL2652

Supply Lines, Electrical Connection, & Drain Options

Two 3/4" connector water supply lines included with Fast Fill Faucets

Connect to Shut Off Valves (not included)








All electrical fixtures connect to a dedicated GFCI protected outlet or GFCI protected Circuit Breaker.








T-Type four (4) 2" drain ports allow for the drain pipe to be installed in either direction.



Drain Caps Installed On Either Side Of The Drain unused Port.





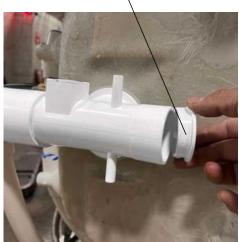



APWOL2652

2 Piece Single Lever Fast-Fill Faucet

Description

Solid brass spout in a chrome finish with a 5-setting pull out hand shower mixer with back-flow prevention valve this includes a 5' braided hose. Two 3/4" 5' braided stainless-steel supply lines are included along with Cold/Hot levers with a diverter for the hand mixer Flow

- •Hand shower is limited to 1.9 GPM (7.5L/min)
- •Faucet fill rate designed for 16 GPM (68.1L/min)

Cartridge


- •40mm high flow cartridge design
- •Nonmetallic/nonferrous and stainless-steel material

Standards

- •Third party certified to meet: CSA B125.1, ASMEA112.18.1, ICC117.1 and all applicable requirements referenced therein
- •Certified to ANSI/NSF 61/9
- •ADA for lever/handle
- •IAPMO R&T UPC certified



NOTE: This faucet is designed to be installed through 2-1/2" diameter hole for faucet, 1/3" diameter hole for mounting rods, and a 7/8" diagonal hole for the hand shower.

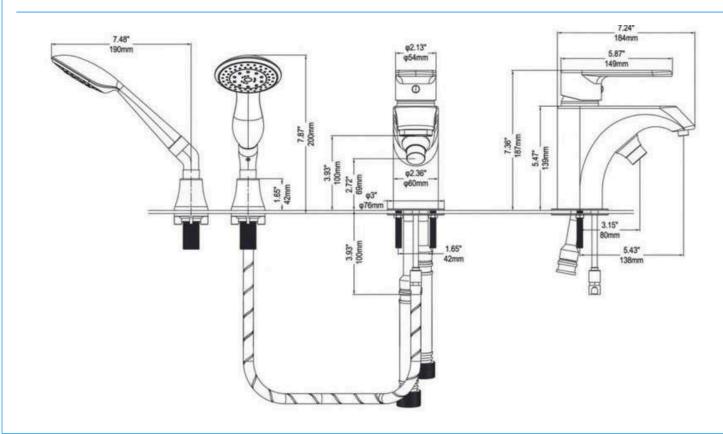




APWOL2652 Replacing A Valve Cartridge

Step-by-step Instructions to replace a valve cartridge for Freedom 2-piece faucets.

Step.1 Remove the Hot/Cold screw hole cover.

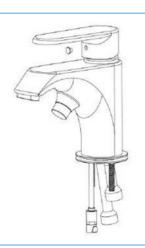

Step.2 Use an Allen wrench to remove the handle Screw.



Step.3 Take out the handle and remove the brass escutcheon



Step.4 Use a wrench to unscrew the pressure cap.



Step.5 Remove the cartridge and replace it with new piece.



